

RS232C Command Code Table ProAV9350

CODE	1.8"XGA 4 LAMP
C00	POWER ON
C01	Forced POWER OFF
C02	POWER OFF
C05	SLOT1 SELECT
C06	SLOT2 SELECT
C07	SLOT3 SELECT
C08	SLOT4 SELECT
C09	VOLUME +
C0A	VOLUME -
C0B	SOUND MUTE ON
C0C	SOUND MUTE OFF
C0D	VIDEO MUTE ON
C0E	VIDEO MUTE OFF
C0F	AV REGULAR SIZE
C10	AV WIDE SIZE
C1C	MENU ON
C1D	MENU OFF
C1E	DISPLAY CLEAR
C1F	NORMAL
C20	
C26	
C30	D.Zoom+
C31	D.Zoom-
C3A	POINTER RIGHT
C3B	POINTER LEFT
C3C	POINTER UP
C3D	POINTER DOWN
C3E	MUPO REAR SW
C3F	ENTER
C42	
C43	FREEZE ON
C44	FREEZE OFF
C46	ZOOM DOWN
C47	ZOOM UP
C49	
C4A	FOCUS DOWN
C4B	FOCUS UP
C4D	
C4F	CURSOL
C59	
C5A	
C5D	LENS SHIFT UP
C5E	LENS SHIFT DOWN
C5F	LENS SHIFT LEFT
C60	LENS SHIFT RIGHT
C70	4 LAMP MODE SET
C71	2 LAMP 1-4 SET
C72	2 LAMP 2-3 SET
C80	ZOOM MODE SET
C87	FOCUS MODE SET
C88	LENS SHIFT MODE
C89	Auto Image
C8A	Presen timer
C8B	
C8C	
C8D	
C8E	Keystone +
C8F	Keystone -

Status command

00	POWER ON
80	STANDBY
40	COUNT DOWN
20	COOLING DOWN
10	Power Failure
*8	Temp. Warning

Input Mode command

1	Input 1	
2	Input 2	
3	Input 3	
4	Input 4	

Option command

1	PROXIMA
---	---------

Lamp remaining hour

****	4-digit x 4
------	-------------

Setting Information

11	normal
10	ceiling On
01	Rear On
00	ceiling rear On

RS232C Status Table

CODE	1.8"XGA 4LAMP
CR0	Status Read
CR1	Input Mode Read
CR3	Lamp Time Read
CR4	Setting Read
CR5	Chassis #
CR6	TEMP READ
CR7	LAMP MODE READ