cinego

quick start guide

D-1000

DLP™ A TEXAS INSTRUMENTS TECHNOLOGY

DVD VIDEO

1. Connect Subwoofer

Connect the projector to the subwoofer via the subwoofer cable.

2. Connect Power

Connect Subwoofer's power cord to a standard AC wall outlet.

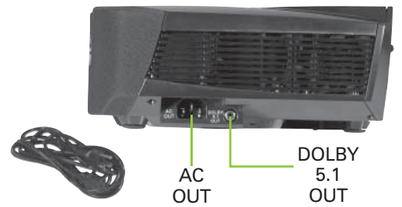

Connect projector to AC wall outlet via the supplied power cord.

3. Remove Lens Cap

4. Power on Projector

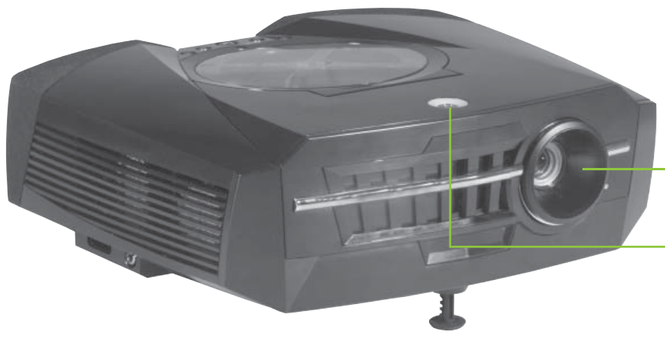

Remove lens cap

Press Power button

5. Adjust Height

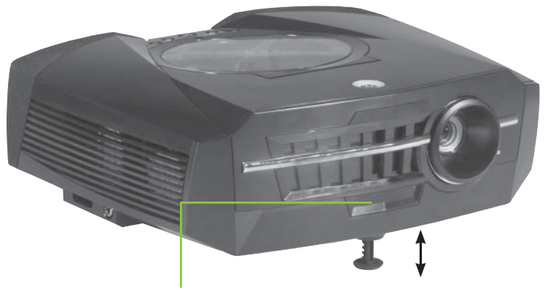

Push button to release height adjuster.

Twist rear leveling foot to raise or lower it.

6. Adjust Image

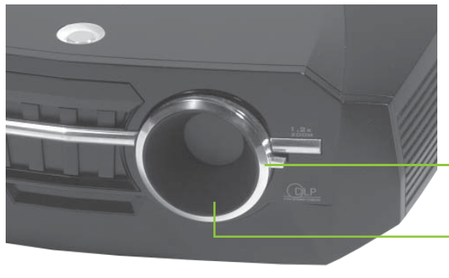

Zoom Ring

Focus Ring

NOTE *If your projected image is wider on the top than on the bottom (or vice versa), you may need to adjust Keystone or Aspect Ratio. See page 28 of your User's Guide for more information.*

NOTE *For information regarding the ideal distance from projector to screen, see page 27 of your User's Guide.*

7. Play a movie

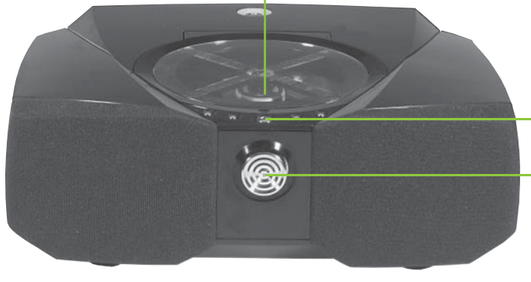

1. Open compartment. Place DVD inside. Close compartment.
2. Press Play.
3. Turn to adjust volume.

NOTE *CAUTION: DO NOT move your projector at all while the lamp is hot. Wait until your projector has cooled before you change its position or adjust its height.*

©2004. Innovation One.
All rights reserved. cinego and cinego.com are trademarks used by Innovation One.

Printed in Taiwan
D-1000
12A04